

Prolo Ring Gesture Cheat Sheet (Firmware 1.0.7)

Quick Mode Reference

Mode	How to Enter	Main Use	Additional Features
Cursor	Swipe Left on Modstrip	Full Mouse & Cursor Control	Scroll & Shortcuts
Navigation	Swipe Right on Modstrip	In-App Navigation	Cursor Control; Scroll; ModNav Extra Gestures
Touch	Swipe Right + Hold Modstrip	Media Control	Cursor Control; ModTouch Extra Gestures
Air	Swipe Left + Hold Modstrip	Motion Control	AirTouch Extra Gestures

Cursor Mode

Main use: full mouse & cursor control. Additional: scrolling and shortcuts.

Move on Trackpad	Move cursor
Single Tap	Left click
Edge Scroll	Instant vertical scroll
Bottom Left Corner Hot Key: Long Hold	Middle click
Bottom Right Corner Hot Key: Long Hold	Right click
Bottom Left Corner Hot Key: Double Click	Left key press (latched for Drag; single tap to release)
Bottom Right Corner Hot Key: Double Click	Right click
Dual-Finger Tap Hot Key: Track + Track	Win + D
Trackpad Hold + Single Air Tap	Snap cursor to left
Trackpad Hold + Double Air Tap	Snap cursor to right
Mod Long Hold	Start scroll/pan (continuous). Double tap trackpad to exit
Mod Hold + Trackpad Move	Instant click-and-drag. Release both fingers to stop

Navigation Mode

Main use: in-app navigation. Additional: temporary cursor, edge scroll, and ModNav extra gestures.

Swipe Up/Down (+Hold)	Up/Down arrow (continuous)
Swipe Right/Left (+Hold)	Right/Left arrow (continuous)
Long Hold	Ctrl + Win (Push To Talk)
Tap	Enter
Double Tap	Consumer Back (XR Glasses)
Triple Tap	Consumer Home (XR Glasses)
Dual-Finger Pinch In	Zoom out (Ctrl -)
Dual-Finger Pinch Out	Zoom in (Ctrl =)
Edge Scroll	Instant vertical scroll
Fast Tap + Hold	Temporary Cursor; release to return to Navigation

ModNav Gestures — Extra Navigation control by holding Modstrip in Navigation Mode.

Mod Hold + Swipe Left	Home
Mod Hold + Swipe Right	End
Mod Hold + Swipe Up / Down	Page up / down
Mod Hold + Tap / Double Tap / Triple Tap	Customizable*

Note: Customizable gestures are available only with Pro Edition.

Touch Mode

Main use: media control. Additional: temporary cursor, and ModTouch extra gestures.

Swipe Up (+Hold)	Volume up / Camera Shutter
Swipe Down (+Hold)	Volume down
Swipe Right (+Hold)	Next track
Swipe Left (+Hold)	Previous track
Long Hold	Customizable*
Tap	Play / Pause
Double Tap	Mute
Triple Tap	Customizable*
Tap + Hold	Temporary Cursor; release to return to Navigation

ModTouch Gestures — More media control and customizations by holding Modstrip.

Mod Hold + Swipe Right	Fast Forward
Mod Hold + Swipe Left	Rewind
Mod Hold + Swipe Up / Down	Customizable*
Mod Hold + Tap / Double Tap / Triple Tap	Customizable*

Air Mode

Standard Gestures — Control without touching any surface.

Swipe Left / Right	Customizable*
Single / Double Tap	Customizable*

AirTouch Gestures — Hold the Trackpad for more controls in Air Mode.

Trackpad Hold + Swipe Left / Right	Customizable*
Trackpad Hold + Single / Double Tap	Customizable*

System & Mode Actions

Swipe Left on Mod	Enter Cursor Mode	3x Tap + Hold Mod	Toggle Device Status ↔ App Status
Swipe Right on Mod	Enter Navigation Mode	4x Tap + Hold Mod	Shutdown (Requires Charging to Turn On)
Swipe Right & Hold on Mod	Enter Touch Mode	5x Tap + Hold Mod	Reset to Factory Default
Swipe Left & Hold on Mod	Enter Air Mode	6x Tap + Hold Mod	Enter OTA Mode for Firmware Update
1x Tap + Hold Mod	Connect / Switch / Unlock	Palm Hold	Lock (Unlock Gesture or Charging to Unlock)
2x Tap + Hold Mod	Enter Pairing / Add Device		